WATERWORKS


INSTALLATION GUIDELINES

IMPORTANT:

- To ensure this product is installed properly, you must read and follow these guidelines.
- > The owner/user of this product must keep this information for further reference.
- > This product must be installed by a professional licensed contractor.
- Inspect this product to ensure you have all the parts required for proper installation.
- To avoid damaging the product, do NOT use power tools during installation.
- If further assistance is required, please contact Product Support at 1-800-927-2120 Monday through Friday, 8am – 6pm EST.


TECHNICAL DETAILS:

| DIM | VALUE |
|-----|------------|
| А | 8" [203mm] |

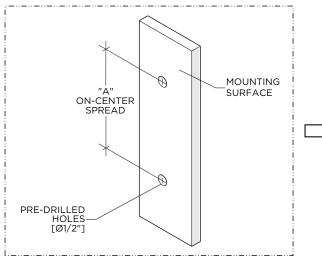

1. Drill two 1/2" diameter holes on the mounting surface at the required on-center spread (DIM A).

NOTE: Ensure the holes are level and verify the oncenter spread (DIM A).

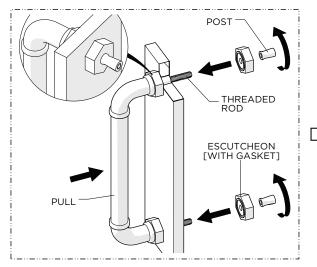


3. Slide the ESCUTCHEONS onto the THREADED RODS then thread and securely tighten the RETAINING POSTS.


NOTE: The POSTS should securely hold the ESCUTCHEONS against the mounting surface.

STYLE No. RGHW88

Regulator 8" Shower Back to Back Pull

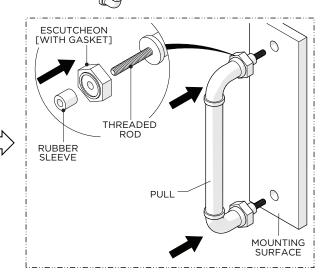

2. Pre-assemble the ESCUTCHEONS and RUBBER SLEEVES onto the THREADED RODS on the PULL then insert the RUBBER SLEEVES into the predrilled holes.

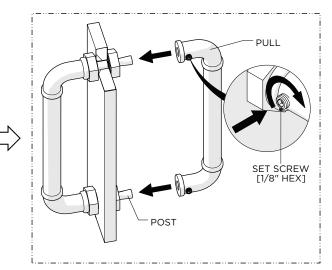

4. Slide the 2nd PULL onto the RETAINING POSTS until it contacts the ESCUTCHEONS then thread and securely tighten the SET SCREWS.

NOTE: The 2nd PULL can be installed with the SET SCREWS facing in either direction as desired.